



# Installation Instructions

Step 1




Locate rafters, and verify there is no electrical wires in area.  
Verify that the hole for the mounting base will be in minimum of 3" from any rafter  
Drill hole using 3" hole saw  
Insert mounting base in 3" hole

Step 2

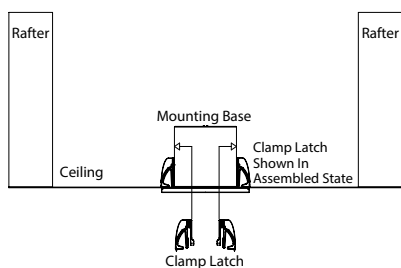


Insert 2 clamp latches inside mounting base. (See Step 2)  
Drill 2 screw holes in ceiling using mounting base as template

Step 3

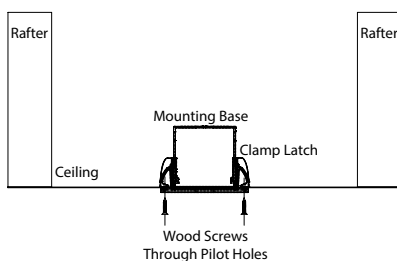


Install wood screw provided into previously drilled holes (DO NOT OVERTIGHTEN)

Step 4

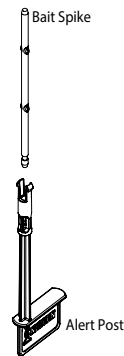


Insert bait spike into alert post

Step 5

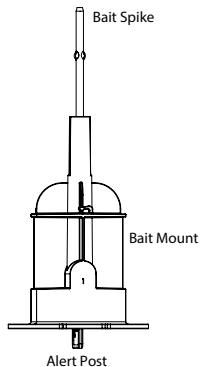


Install assembled alert post into the bait mount

Step 6

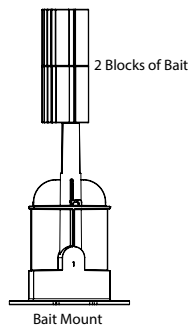

Load 2 pieces of bait onto bait spike

Step 7

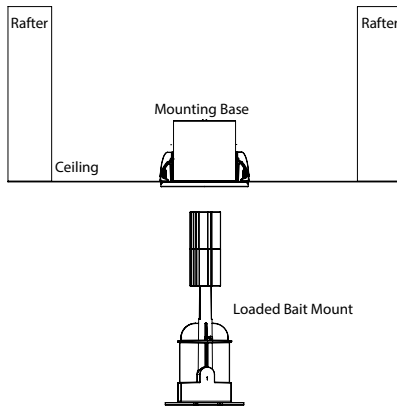

Insert bait mount into mounting base, turning counter clockwise to lock

## RELOADING BAIT

- Alert post will drop when bait spike is empty.
- Remove bait mount by turning clockwise to unlock.
- Refill bait spike with two pieces of bait.
- Reinsert bait mount into mounting base, turning clockwise to lock.

## ITEMS NEEDED FOR INSTALLATION

- Drill
- 3" hole saw
- Drill bit size 1/8" = 0.125"
- Phillips head screw driver
- Protective Eye Wear
- Safety Gloves