


FARM-FOAM EVO

FOAMING ALKALINE CLEANER AND DESCALER

- Chlorine-Free
- Formulated with biodegradable detergents
- Superior degreasing capabilities
- Easy application and rinsing



Net Contents: 1 gal. (3.79 L)

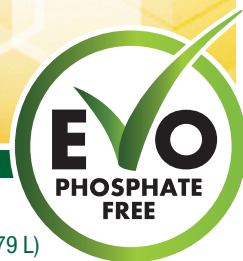

FarmFoam EVO Components*			
Chemical Name	CAS No.	Function	List(s)
Water	7732-18-5	Diluent	Not Applicable
Sodium Hydroxide	1310-73-2	Cleaning agent	Not Applicable
Sodium Lauryl Ether Sulfate	68585-34-2	Surfactant	Not Applicable
EDTA	139-89-9	Sequestering agent	Not Applicable
D-Glucopyranose, oligomers, decyl octyl glycosides	68515-73-1	Surfactant	Not Applicable
2,2'-Iminodiethanol	111-42-2	Surfactant	1, 9
Fragrance Component(s):			
Citral	5392-40-5	Fragrance	FRA
Geraniol	106-24-1	Fragrance	FRA
Butylphenyl Methylpropional	80-54-6	Fragrance	FRA
Citronella	106-22-9	Fragrance	FRA

* This table is being shared to comply with the California Cleaning Products Right to Know Act. Please refer to the SDS for further information on product hazards.

ATTENTION: This product can expose you to chemicals including Diethanolamine (CAS No. 111-42-2), which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov

Farm-Foam EVO is used for the removal of organic soil, especially fats and grease. **Farm-Foam EVO** is ideal for the removal of fecal material and soil in swine and poultry premises, hatcheries, and other animal confinement facilities. **Farm-Foam EVO** removes dirt, grime, protein, and oils, as well as minerals and adherent films.

Recommended areas of use:

For Poultry Hatcheries: Can be applied to walls, floors, and ceilings of rooms, setters, and hatches. For use in the manual cleaning of trays, racks, plastic flats, and boxes.

For Farm Premises: As a general cleaner and deodorizer in poultry houses, swine and livestock barns, and as a wetting agent to wash down poultry houses, and swine and livestock barns.

For Food-Processing Plants: Use on floors, walls, shelves, utensils, and in walk-in coolers. It cleans and brightens stainless steel, glass, plastic, concrete, and tile in poultry and meat-processing and canning plants.

DIRECTIONS FOR USE

For Pressure Washing Applications:

For Use as a General-Purpose Cleaner for Walls, Floors, Feed Pails, Waterers, and Equipment: Use **Farm-Foam EVO** as a 0.25% to 0.75% solution (¼ to 1 fl. oz. per gallon of water) (2 to 8 mL/L) in tepid to hot water (110° to 160°F or 42° to 70°C) for light to medium soiling, or as a 1.5% to 2.5% solution (2 to 3 fl. oz. per gallon of water) (16 to 24 mL/L) for heavy soiling. Spray the solution on all surfaces. Using warmer water will improve the effectiveness of the product in high-grease situations. If possible, allow **Farm-Foam EVO** to remain on surfaces for 10 minutes before completely rinsing with clean water at high-pressure. Consult your Neogen Corporation Representative for recommendations.

For Use on Food-Processing Equipment, Utensils, and Other Food Contact Surfaces: Clean as above. Thoroughly rinse cleaned surfaces with potable water before reuse. Where recommended or permitted, apply a sanitizer solution to food contact surfaces before reuse.

For Use in Barns and Other Farm Premises: Use **Farm-Foam EVO** at an application rate of ¼ to 1 fl. oz. per gallon of water (2 to 8 mL/L) for cleaning. Apply to surfaces and, if possible, let stand for 10 minutes before thoroughly rinsing all surfaces with clean water at high-pressure. After thorough cleaning, let surfaces dry as much as possible, then follow-up with an appropriate disinfecting solution.

For Foaming Applications:

Use **Farm-Foam EVO** to prepare a stock solution of 1 to 3 fl. oz. per gallon of water (8 to 24 mL/L) or calibrate your dosing equipment to achieve this dilution. Using a foaming wand, apply solution onto all surfaces and, if possible, let the foam stand for 10 minutes before thoroughly rinsing all surfaces with clean water at high-pressure. After thorough cleaning, let surfaces dry as much as possible, then follow-up with an appropriate disinfecting solution.

Lot No.

Date of Manufacture

Expiration Date



Manufactured by: Preserve International®

A wholly owned subsidiary of Neogen®

944 Nandino Blvd

Lexington, KY 40511

L5959-0920



SIGNAL WORD: DANGER

HAZARD STATEMENTS

Causes severe skin burns and eye damage.

Suspected of causing cancer.

May be corrosive to metals.

Contains substances which are hazardous to the environment.

PRECAUTIONARY STATEMENTS

Prevention:

Wash thoroughly after handling.

Wear protective gloves/protective clothing/eye protection/face protection.

Do not handle until all safety precautions have been read and understood.

Do not breathe dust/fumes/gas/mist/vapors/spray.

Response:

Immediately contact a poison control center or doctor/physician.

If on skin or hair: Take off immediately all contaminated clothing. Rinse skin with water/shower.

Wash contaminated clothing before reuse.

If swallowed: Rinse mouth. Do NOT induce vomiting.

If inhaled: Remove person to fresh air and keep comfortable for breathing.

If in eyes: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing eyes.

For specific treatment, refer to Section 4 of the product Safety Data Sheet (SDS).

STORAGE AND DISPOSAL

Storage: Store locked up.

Disposal: Dispose of contents/container in accordance with Federal, state, and local regulations.