


ACID-A-FOAM™ EVO

CLEANER AND DESCALER

- Foaming acidic cleaner for use in alternating pH programs in poultry, swine, veal, dairy, cattle, canine and horse operations, and food-processing plants
- Compatible with other disinfectants
- Removes mineral scale, detergent residues, and other elements left after repeated use of alkaline cleaners



Net Contents: 1 gal. (3.79 L)

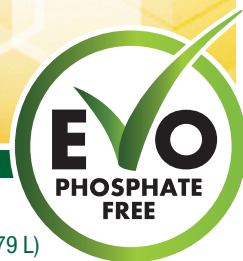

Acid-A-Foam™ EVO Components*			
Chemical Name	CAS No.	Function	List(s)
Water	7732-18-5	Diluent	Not Applicable
Hydrochloric Acid	7647-01-0	Cleaning agent	Not Applicable
Lauryl Dimethyl Amine Oxide	1643-20-5	Wetting agent	Not Applicable
Sulfamic Acid	5329-14-6	Cleaning agent	Not Applicable
Cocamidopropyl Betaine	61789-40-0	Emulsifier	Not Applicable
Acrylic polymer	withheld	Sequestering agent	Not Applicable
Glycolic Acid	79-14-1	Cleaning agent	Not Applicable
Cyclic Organic Compound	withheld	Surfactant	Not Applicable

* This table is being shared to comply with the California Cleaning Products Right to Know Act. Please refer to the SDS for further information on product hazards.

Acid-A-Foam EVO is used as an alternative to regular hatchery, equipment or barn cleaner to remove detergent residues, mineral scale and other hard-to-remove elements. A clean surface is required for complete disinfection. Alternating between a good alkaline detergent and a good acid-based detergent maximizes surface cleanliness and, therefore, prepares the surface for the second step of disinfection. **Acid-A-Foam EVO** removes dirt, grime, protein, and oils as well as minerals and adherent films.

Recommended areas of use

For Poultry Hatcheries: Walls, floors, ceilings of rooms, setters, and hatches. Manual cleaning of trays, racks, plastic flats, and boxes.

For Farm Uses: As a general cleaner and deodorizer in poultry houses, swine and livestock barns, and as a wetting agent to wash down poultry houses and swine and livestock barns.

For Food-Processing Plants: Use on floors, walls and shelves, utensils, and walk-in coolers. It cleans and brightens stainless steel, glass, plastic, concrete, and tile in poultry, meat, and canning plants.

DIRECTIONS FOR USE

As a General-Purpose Cleaner for Walls, Floors, Feed Pails, Waterers, and Equipment: Use **Acid-A-Foam EVO** as a 0.75% to 2.5% solution (1 to 3 fl. oz. per gal. of water) (8 to 24 mL/L). Vary the amount depending on the soil load and how difficult the surface is to clean. **Acid-A-Foam EVO** may be used through high-pressure cleaning equipment, foaming devices, steam cleaners, or it may be used manually with a cloth, sponge, or brush. After cleaning, rinse away soils with fresh water, or wipe off with a clean sponge.

For Food-Processing Equipment, Utensils, and Other Food Contact Surfaces: Clean as above. Thoroughly rinse cleaned surfaces with potable water before they reuse. Where recommended or permitted, apply a sanitizer solution to food contact surfaces before reuse.

For Barn Cleaning: Use a 0.25% to 0.5% solution of **Acid-A-Foam EVO** (1 gal. per 300 to 400 gal. of wash water) (1L/300 - 400L) for cleaning. Apply to surfaces and, if possible, let stand for 10 to 15 minutes before thoroughly rinsing all surfaces with clean water at high-pressure. After a thorough cleaning, let surfaces dry as much as possible, and then follow-up with an appropriate disinfecting solution.

Lot No.

Date of Manufacture

Expiration Date



Manufactured by: Preserve International®, a Neogen® Company
944 Nandino Blvd., Lexington, KY 40511 U.S.A.

Emergency Phone: 1-800-498-5743 (U.S. & Canada)
or **1-651-523-0318** (all other areas)

Product Information (non-emergency)

Phone: 1-800-621-8829
L6006-0920

Item No. 418089/1



SIGNAL WORD: DANGER

HAZARD STATEMENTS

Causes severe skin burns and eye damage.
May be harmful if swallowed.
May be harmful if inhaled.

PRECAUTIONARY STATEMENTS

Prevention:

Wash hands thoroughly after handling.
Wear protective gloves, protective clothing and face protection/eye protection.
Do not breathe dust/fumes/mist/gas/vapors/spray.

Response:

Immediately contact a poison control center or doctor/physician.
If on skin or hair: Take off immediately all contaminated clothing. Rinse skin with water/shower. Wash contaminated clothing before reuse.
If swallowed: Rinse mouth. Do NOT induce vomiting.
If inhaled: Remove person to fresh air and keep comfortable for breathing.
If in eyes: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing eyes.

For specific treatment, refer to Section 4 of the product Safety Data Sheet (SDS).

STORAGE AND DISPOSAL

Storage: Store locked up.

Disposal: Dispose of contents/container in accordance with Federal, state, and local regulations.